





I.Brief Instruction



Truck body made by **Bullex-Schwall** ----- are mainly assembled by specific FRP profiles and particular adhensives.



II.Preparations

1. Accumulate panels for each truck body together, include Roof / Floor/Side & Front Wall /Rear & Side Door Panels.










II.Preparations

 Accumulate FRP profiles for one entire box body together, include three kinds of profiles with different length.
Clean the inner surface of each profile with Acetone liquid.

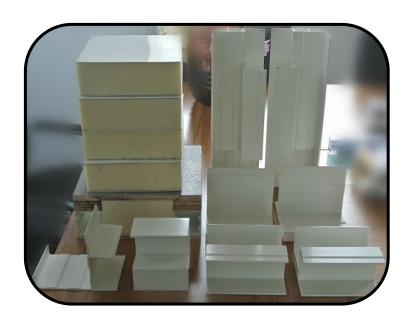





III. Profile Glumming

1. Squeeze the tubular glue onto the inner groove surface of each profile . Keep glumming even and straight .









Stept One:

Assembly the Floor Profiles of three sides .








Stept Two:

Put the Front Side Panel insert the profile

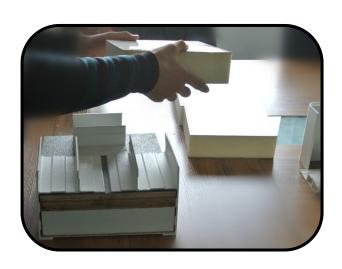






Step Three:

Assembly two vertical profiles on both sides of the front wall.



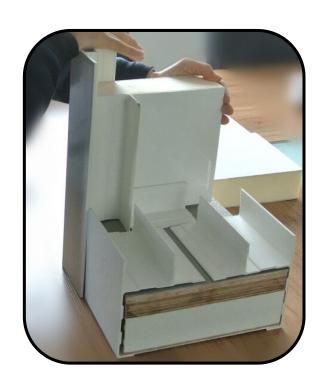



Step Four

Insert Left & Right side panels into the profiles.








Step Five

Assembly the Ceiling profiles of three sides .



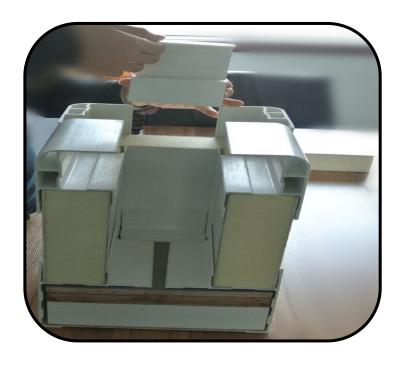



Step Six:

Insert the proof panel








Step Seven:

Assembly & Cover the rear Door Frame



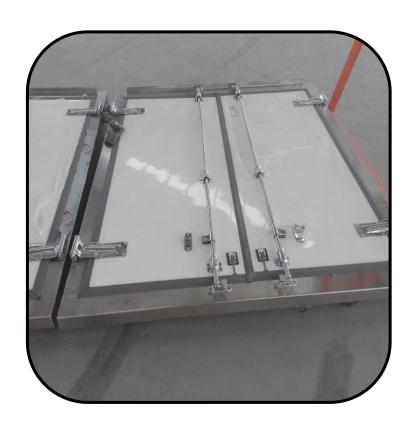



Appreciate for pay attention on us !

Look forward to cooperate for long.